

CASIO Electronic Dictionary Quick Guide (Ver.B)

The contents of this Quick Guide apply to the CASIO XD-SP and XD-GP Series Electronic Dictionaries. Most illustrations and screen shots show the XD-SP6700.

- Hangul, Russian, Simplified Chinese, and accented characters cannot be input on a model that does not include a dictionary that requires such characters. Input of the applicable characters becomes possible when optional software is installed.

Loading Batteries for the First Time

Before using your electronic dictionary, load two LR03 AAA-size alkaline batteries.

1 Remove the battery cover. Pressing at the two points shown in the illustration, slide the cover in the direction indicated by the arrows.

2 Load two batteries. Press the springs with the (-) ends. Press the (+) ends down so the batteries are above the ribbons. Make sure the (+) and (-) ends are facing correctly and that the springs are pressed straight down.

3 Pull the stylus out of the battery cover and then replace the battery cover.

4 Use the stylus to press the RESET button on the back of the dictionary. Do not use a toothpick, lead pencil, or other breakable object.

5 Unfold the electronic dictionary.

6 On the メインパネルコントラスト設定 (Main Panel Contrast Adjustment) screen, use [左] and [右] to adjust display contrast. Then press [Enter/Select].

7 On the メインパネル調整 (Main Panel Adjustment) screen, use the stylus to touch the centers of the four cross marks. Touching the center of the fourth cross will display the handwriting panel contrast adjustment screen.

8 On the 手書きパネルコントラスト設定 (Handwriting Panel Contrast Adjustment) screen, use [左] and [右] to adjust handwriting panel contrast. Then press [Enter/Select].

9 On the handwriting panel, use the stylus to touch the centers of the four cross marks.


10 Touching the center of the fourth cross will display the メニュー (MENU) screen. If the "本機はユーザー名を登録することができます" message appears instead of the menu screen, press [Enter/Select].

Turning Power On and Off

- 1 Press the [ON/OFF] key to turn on power. Power also turns on when you press a dictionary/mode key.
2 Press [ON/OFF] again to turn off power. Power also turns on and off when you open and close the electronic dictionary's panels.

General Guide

Handwriting Panel For handwriting of characters for input. This panel also displays buttons that you can tap to perform various operations.

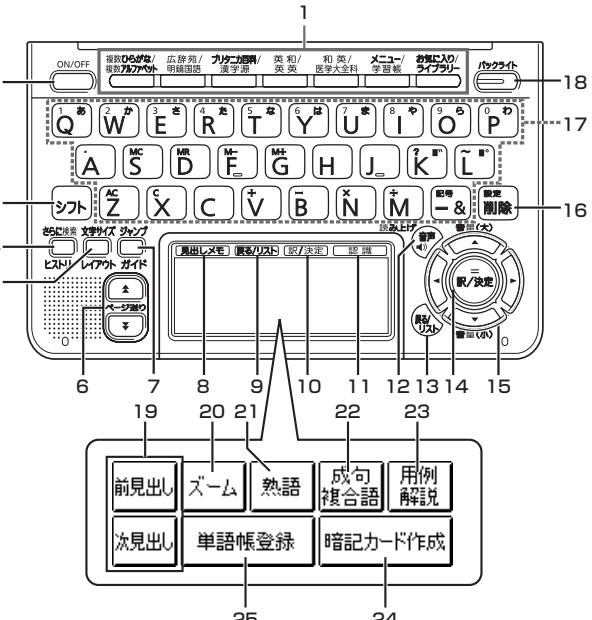

- 1. Dictionary/mode keys Toggle between the initial screens of the two dictionaries/modes assigned to each key.
2. [ON/OFF] Key Toggles power on and off.
3. [Shift] (Shift) Key Shifts the keyboard. To use [Shift], press and release it and then press the next key.
4. [Search] (Additional Search) (History) Key Performs additional search. Press after [Shift] to access history data.
5. [Text Size] (Text Size) (Layout) Key Cycles through available screen text sizes. Press after [Shift] to change the screen layout.
6. [Up/Down] (Scroll) Keys Scroll screen contents up and down. Press after [Shift] to jump back or forward between definitions.
7. [Jump] (Jump) (Guide) Key Enables look up of a term on the currently displayed definition or explanation screen. Press after [Shift] to view guide information.
8. [見出しメモ] (Headword Memo) Icon Touch to affix a midashi memo (headword memo) to a definition or explanation produced by a search.
9. [戻る/リスト] (Back/List) Icon • Touch to back-step through previous operations. • Touch while a dictionary's initial screen is on the display to return to the メニュー screen. • Touch while a definition screen is on the display to switch to the list of terms, which includes the term whose definition you were viewing.
10. [訳/決定] (Translate/Select) Icon Touch to execute a function or to select an on-screen item.
11. [認識] (Confirm) Icon Touch after inputting a character when inputting individual characters on the handwriting panel.
12. [音声] (Audio) (Read) Key Press to hear a reading by the voice of a native speaker of the applicable language. Press after [Shift] to hear a reading by synthesized voice.
13. [戻る/リスト] (Back/List) Key • Press to back-step through previous operations. • Press while a dictionary's initial screen is displayed to return to the メニュー screen. • Press while a definition screen is on the display to switch to the list of terms, which includes the term whose definition you were viewing.
14. [訳/決定] (Translate/Select) Key Executes a function or selects an on-screen item.
15. Arrow Keys • Move the selection highlighting or cursor up, down, left, or right. • The left and right arrow keys move the cursor. • To adjust the audio volume, press [Shift] and then the [Increase] or [Decrease] arrow key.


- 16. [解除] (Setup/Delete) Key • Deletes the character at the current cursor location. • Press after [Shift] to display a screen for changing the setup of the electronic dictionary.
17. Letter Keys Use these keys to enter letters and numbers.
18. [バックライト] (Backlight) Key Toggles the backlight on and off.
19. [前見出し]・[次見出し] (Previous Headword/Next Headword) Icon Tap to jump from the current term to the previous or next term. The same result can be achieved by pressing [Shift] and then [Up] or [Down].
20. [ズーム] (Zoom) Icon Tap to enlarge the characters of a definition or explanation screen.
21. [熟語] (Compound Terms) Icon Tap to view compound terms that use the kanji you are currently viewing in the 漢字源 (Japanese kanji) dictionary.
22. [成句複合語] (Idioms and Compound Expressions) Icon Tap to view idioms and compound expressions that use the term you are currently viewing.
23. [用例解説] (Samples and Explanations) Icon Tap to view samples and explanations in dictionaries that include such information.
24. [暗記カード作成] (Create Flash Card) Icon Tap to create a flash card.
25. [単語帳登録] (Add to Word List) Icon Display a term, sample sentence or idiom screen and then tap this icon to add the term, sample sentence or idiom to the word list.

Display Indicators

The following explains the meanings of display indicators.

Table with 2 columns: This indicator: and Means this:. It lists various icons like [解説], [熟語], [成句], [用例], [音声], [読み上げ], [音声読み], [英語], [ジャンプ], [履歴], [ズーム], [ガイド], [全表示], [単語帳], and [連続] with their respective functions.

Keyboard Input

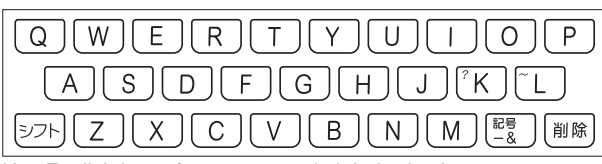

Use English input for unaccented alphabetic characters. See the following notes about other languages for other characters.

Alphabetic Characters

Table showing input characters for Hiragana, Katakana, Kanji, Simplified Chinese, and Hangul, with corresponding keyboard key sequences.

Hangul

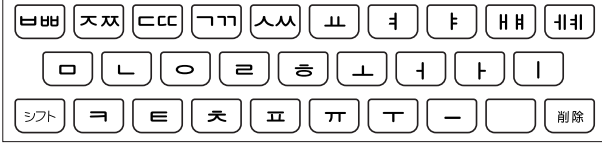


Table for Hangul input characters and key sequences.

Chinese (Pinyin)

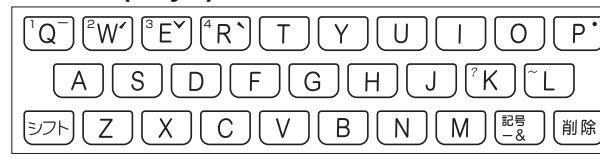


Table for Chinese (Pinyin) input, showing 'To input this:' and 'Perform this operation:' for various characters and symbols.

Japanese

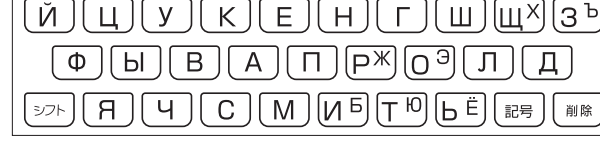


Table for Japanese input, showing 'To input this:' and 'Type this:' for various characters and symbols.

German, French, Spanish and Italian

- All alphabetic characters are input in lower-case, regardless of their normal capitalization.
• For the German "ß", input "ss".
• For other characters that normally include a diacritic, input the character without the diacritic. Example: "ä" --> "a", "ö" --> "e", etc.
• For the French "ç" input "c", and for "œ", input "oe".
• Input hyphenated terms as single words, without a hyphen. To look up "peut-être", for example, input "peutetre".
• When inputting a term that consists of multiple words, input the words without any spaces. To look up "die Elbe", for example, input "dieElbe".

Russian



- Use the [Shift] key to input the characters shown below. "X" -> [Shift]+[X], "b" -> [Shift]+[b], "J" -> [Shift]+[P], "3" -> [Shift]+[O], "5" -> [Shift]+[V], "10" -> [Shift]+[I], "È" -> [Shift]+[E].
• All of the above characters are input a lower-case.

Handwriting Input

Use the stylus to write characters on the handwriting panel and then tap [認識]. With some search methods, like "単漢字を大きな手書き入力から探す", you can enter search terms using handwriting input only.

Character Input Mode

The indicators described below appear on the main panel to show the current input mode. Also note that the handwriting panel changes to two characters per screen or five characters per screen in accordance with the input mode.

Two Characters Per screen

Table showing supported input characters for Two Characters Per screen mode, including Indicating, Hiragana, Katakana, Kanji, Simplified Chinese, and Hangul.

Two-character Handwriting Panel


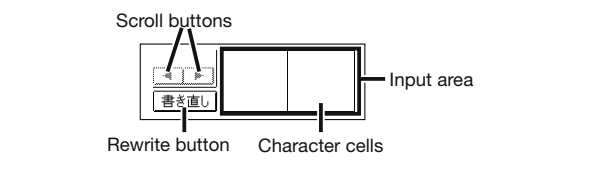


Table for Two-character Handwriting Panel input, showing 'To input this:' and 'Type this:' for various characters and symbols.

Five Characters Per screen


Table showing supported input characters for Five Characters Per screen mode, including Indicating, Alphabetic, Accented alphabetic, Russian, and Numbers.

Five-character Handwriting Panel

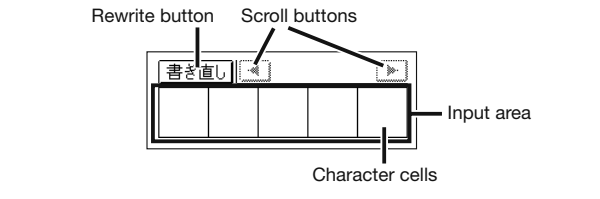

Correcting Kanji Character Input


Example: After mistakenly inputting 喜怒哀楽 instead of 喜怒哀楽

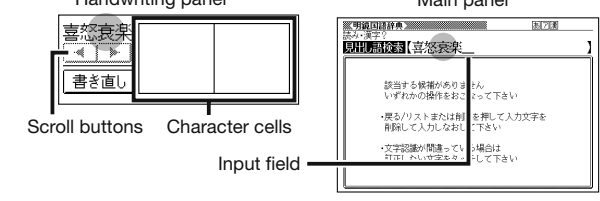

- 1 On the handwriting panel or in the input field on the main panel, tap a character (哀). This displays up to 10 possible candidates for the character. If there are too many characters to fit, tap the scroll buttons to scroll.
2 If you find the correct character among the candidates, tap it.
3 If you do not find the correct character, tap [書き直し] (rewrite), rewrite the character on the handwriting panel and then tap [認識]. Tapping [書き直し] (Rewrite) while the character cells of the handwriting panel are blank (nothing input) will delete the character currently in the input field of the main panel.

Stylus Basics

- When using the stylus to perform operations on the main panel, avoid applying excess pressure. Excess pressure can crack the main panel.
When using the stylus to perform an operation on the main panel, support the main panel from behind with your hand.

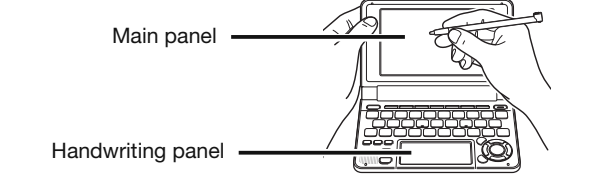

To select a category and initial screen items

- 1 Press [メニュー] to display the メニュー screen.
2 With the stylus, tap a category tab and then the dictionary/mode you want. This will highlight the dictionary/mode.
3 Tap the highlighted dictionary/mode again to display its initial screen. Instead of step 3, you also could tap [訳/決定] on the handwriting panel. Other operations you can perform on the main panel by tapping with the stylus are selecting a search option, selecting a term, and selecting a headword. If a definition or explanation screen has additional information above or below, you can drag the screen with the stylus and scroll its contents and bring other information into view.

Search Functions

The following is an overview of some of the search functions. Headword Search This is the most basic type of search. Use it when you want to look up a term in a dictionary.

- 1 Display the initial screen of a dictionary/mode.
2 Use [上] and [下] to select 見出し語検索 (Headword Search).
3 Enter the term you want. As you enter each character, the list of terms on the main panel is updated accordingly. When entering a headword, you can use the following wildcard characters.
• [ ]: Search for characters in the brackets.
• [?]: Search for any character.
• [\*]: Search for any number of characters.
• [#]: Search for the character #.
• [^]: Search for the character ^.

Table with columns 'Character' and 'Represents', showing symbols like ? and - and their corresponding character representations.

- 4 Use [左] and [右] to move the highlighting to a term and then press [訳/決定] to display its definition screen.

Sample Sentence Search/Idiom Search You can use the following procedure to search for idioms containing a specific term when the initial screen of the mode you are in has a 成句検索 (idiom search) option.

- 1 Display the initial screen of the dictionary/mode.
2 Use [上] and [下] to select 成句検索. Select 例文検索 (sample sentence search) to search for a sample sentence.
3 Enter the term. When inputting multiple words, separate them using the ampersand character (&), not spaces. Example: get to -> get&to
4 Press [訳/決定]. This displays a list of all idioms that contain the term.
5 Use [上] and [下] to move the highlighting to an idiom and then press [訳/決定] to display detailed information.

Jump Search You can use jump search to jump to another location in the same dictionary or to another dictionary.

To jump in the same dictionary

- 1 When search results show items with a large arrow (右) or small arrow (左) jump symbol, press [ジャンプ]. The [ジャンプ] indicator appears and the first character on the screen becomes highlighted.
2 Use the arrow keys to move the highlighting to the item you want and then press [訳/決定] to jump.

To jump to another dictionary

- 1 While the results of a search are displayed, press [ジャンプ]. The [ジャンプ] indicator appears and the first character on the screen becomes highlighted.
2 Use the arrow keys to move the highlighting to a term and then press [訳/決定]. This displays a dictionary menu.
3 Use [上] and [下] to select a dictionary and then press [訳/決定]. This displays a list of candidates.
4 Use [上] and [下] to move the highlighting to the item you want and then press [訳/決定] to jump.

Multi-dictionary Search

Use the following procedure to search for a term across multiple dictionaries.

- 1 On the メニュー screen, select the 便利な機能 (Useful Functions) tab and then select 複数辞書アルファベットで検索 (Alphabetic Multi-dictionary Search). You also could select 複数辞書ひらがなで検索 (Hiragana Multi-dictionary Search) or 複数辞書漢字で検索 (Kanji Multi-dictionary Search).
2 On the search screen that appears, enter a term. Terms starting with the characters you have entered appear in a list on the display. Each term also includes an indicator showing its dictionary.
3 Use [上] and [下] to move the highlighting to a term and then press [訳/決定] to display its definition screen.

