



# **MOTOROLA SOLUTIONS**

## **WiNG5.4 用簡易初期化ガイド**

2012.10.24 R1.0U

## 改版履歴

日付	版数	詳細
2012.10.24	初版 (Rev 1.0U)	WiNG5.4 (FW:5.4系) 用の簡易初期化ガイドを新規作成

# WiNG5.4簡易初期化ガイド 注意事項

## 【 注意事項 】

- 本手順書は、ファームウェアバージョンが、『5.4.0.0-047R』をベースに作成しております。
- 本手順を実施された場合、すべてのAPの設定が消去されますので、ご注意ください。
- 一度消去されました設定は復元することはできませんので、初期化前に設定ファイルを保存することを強くご推奨致します。

# WiNG5.4 AP 初期化手順

# 初期化手順1

- ✓ [Operations] ⇒ [Devices] の順にクリックします。
- ✓ 左側のツリーから、該当するAPを選択し、[File Management] タブをクリックします。

The screenshot displays the WiNG v5.4 web interface. The top navigation bar includes 'Dashboard', 'Configuration', 'Diagnostics', 'Operations' (highlighted with a red circle and '1'), and 'Statistics'. The left sidebar shows a tree structure with 'System' and 'default' folders, and a specific device 'DemoAP6532' (highlighted with a red circle and '3'). The main content area has tabs for 'Summary', 'Adopted AP Upgrade', 'File Management' (highlighted with a red circle and '4'), 'Adopted AP Restart', and 'Captive Portal Pages'. The 'File Management' tab is active, showing a 'File Browser' section with a tree view of folders: 'flash:', 'nvram:', and 'system:'. Below the tree is a table with columns: 'File Name', 'Size (Kb)', 'Last Modified', and 'File Type'. At the bottom of the interface, there is an 'Event Summary' bar with colored indicators (0, 0, 4, 13) and a search bar labeled 'Find Functional Area' with the placeholder text 'Type to search'.

## 初期化手順2

- ✓ File Browser画面から、“nvram”を選択し、“Startup-config”を選択します。
- ✓ 「Delete File」ボタンをクリックします。

The screenshot displays the WING v5.4 File Browser interface. The left sidebar shows the directory structure: System > default > DemoAP6532. The main area is divided into a file list on the left and a detailed view on the right. The file list shows the 'nvram' directory selected (marked with a red circle 1). The detailed view shows the 'startup-config' file selected (marked with a red circle 2). The 'Delete File' button at the bottom right is highlighted with a red circle 3.

File Name	Size (Kb)	Last Modified	File Type
licenses	49	2012-10-23 14:47:22	binary
startup-config	3343	2012-10-24 09:28:56	binary


Folder Name:

Create Folder Delete Folder Transfer File **Delete File** Refresh

Event Summary: 0 0 4 13 Find Functional Area:

## 初期化手順3

- ✓ 画面上から、“Startup-config”が消えたら、「Refresh」ボタンをクリックしてください。

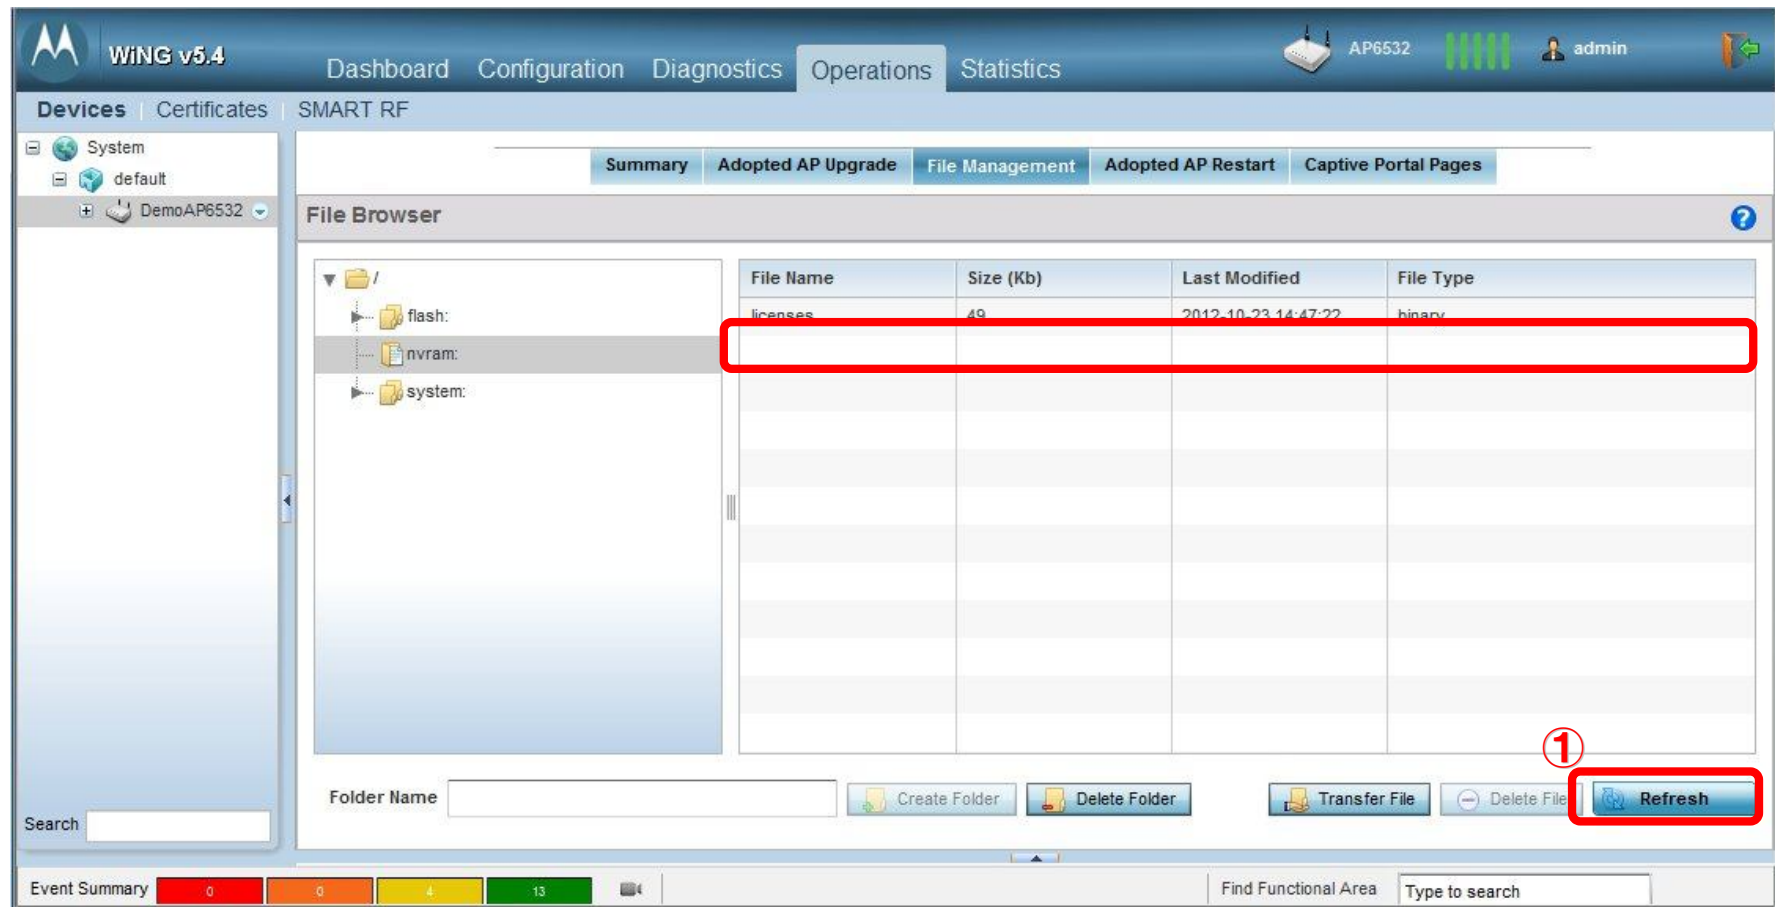

## 初期化手順4

- ✓ File Browser画面で、“nvram”を選択し、“Startup-config”が表示され、Sizeが“27”(Default)となっていることを確認してください。(WiNG5.4の場合)

The screenshot shows the WiNG v5.4 web interface. The 'File Browser' tab is active, displaying a file tree on the left with 'nvram' selected. The main area shows a table of files in the 'nvram' directory. The 'startup-config' file is highlighted with a red box and a red circle with the number 1. The table columns are File Name, Size (Kb), Last Modified, and File Type.

File Name	Size (Kb)	Last Modified	File Type
licenses	49	2012-10-23 14:47:22	binary
startup-config	27	2012-10-24 10:36:28	binary



# 初期化手順5

- ✓ 左側ツリーの該当Aを選択し、右側の下矢印ボタンをクリックすると、メニューが表示されます。
- ✓ メニューから、“Reload”を選択します。

The screenshot displays the WiNG v5.4 web interface. The top navigation bar includes 'Dashboard', 'Configuration', 'Diagnostics', 'Operations', and 'Statistics'. The 'Operations' tab is active. On the left sidebar, under 'Devices', the 'DemoAP6532' device is selected, indicated by a red circle with the number 1. A context menu is open for this device, with the 'Reload' option highlighted by a red circle with the number 2. The main content area shows a 'File Browser' section with a table of files:


File Name	Size (Kb)	Last Modified	File Type
licenses	49	2012-10-23 14:47:22	binary
startup-config	27	2012-10-24 10:36:28	binary

At the bottom of the interface, there is an 'Event Summary' bar with colored indicators (red, orange, yellow, green) and counts (0, 0, 4, 13). A search bar labeled 'Find Functional Area' is also present.

## 初期化手順5

- ✓ Reload画面が表示されましたら、「Reload」ボタンをクリックしてください。

※ クリック後にAPが再起動されますので、エラーメッセージが表示されることがあります。

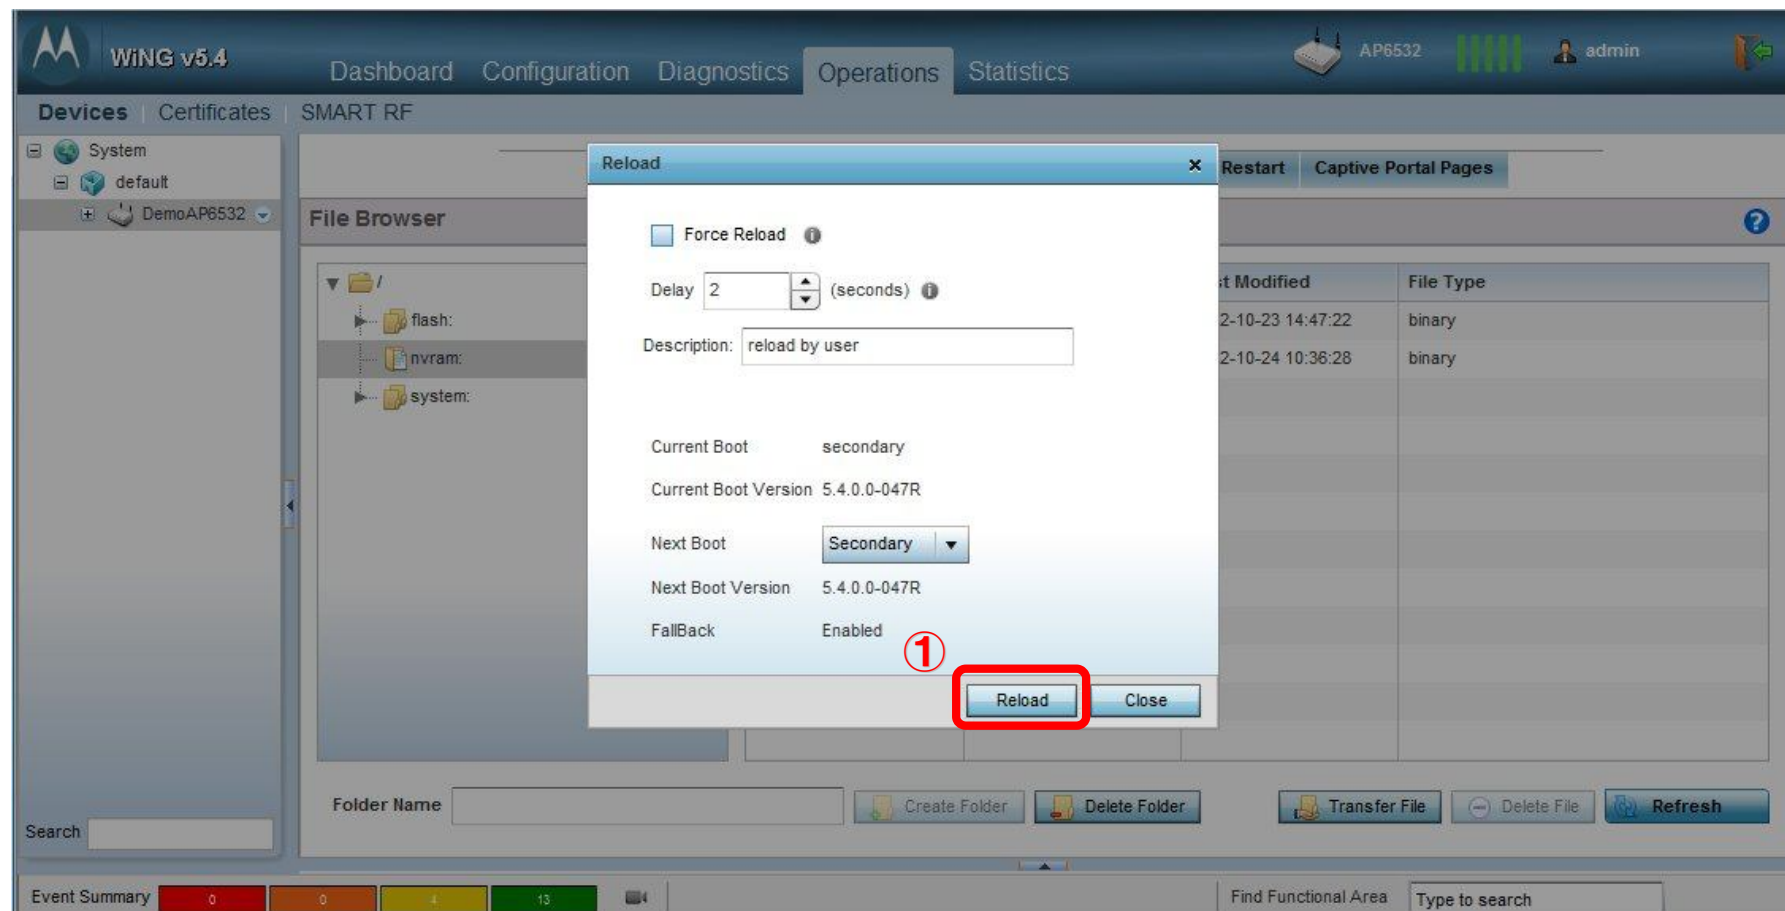

**THANK YOU...**